

Marmox Wetroom Benches

Marmox have produced a range of pre-assembled benches. As you would expect, they are completely waterproof, making them ideal for use in any wet area, such as showers, steam rooms, swimming pools, etc., as well as external use in a garden or commercial setting.

Marmox benches are finished with our high quality polymer-cement coating, that enables superior adhesion when fixing tiles with a flexible tile adhesive. The design also incorporates a void to enable the discreet passage of cables or pipe work.

Marmox benches are available in three styles: **The Square**, **The Regular** and **The Chair**. The standard length of a Marmox bench is one meter, however they can be cut down as required. Marmox benches are ready to go; no need to prime – just simply adhere into place, tile and grout for your desired finish.



Square




Chair



Regular

Marmox benches can be custom made to match your exact room dimensions or design specification. For further information on our custom made service contact 01634 835290.

OPTIONS FOR MADE TO MEASURE BENCHES

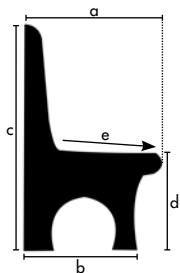

Style	Length mm	a. Depth Total mm	b. Depth Base mm	c. Height Total mm	d. Height of seat mm	e. Slope	Weight kg
Square (MO12)	1000	500	450	500	495	1%	14
Regular (MO13)	1000	511	425	476	410	1%	15
Chair (MO14)	1000	561	430	890	440	1%	21

Marmox Bench fitting instructions



Materials required per bench:
1 x tube of MSP360
1 x roll of Marmox Waterproof Tape
Tools required:
Scraper
Sharp knife



1 Turn the bench over to expose the underneath, apply MSP360 in generous spots to each foot of the bench and 6 spots to the back of the bench as shown.



2 Place the bench into position, pressing firmly to ensure you have good adhesion between the bench and the substrates. Seal around the perimeter of the bench using the MSP360.



3 Using the Marmox waterproof tape, finish the waterproof joints by applying the tape around the perimeter of the bench, push the tape into the corners of the bench with a scraper.


Joining the benches



Follow steps 1 & 2. Join benches together using MSP360. Once both benches are in position continue by following step 3.




Blocking the utility void

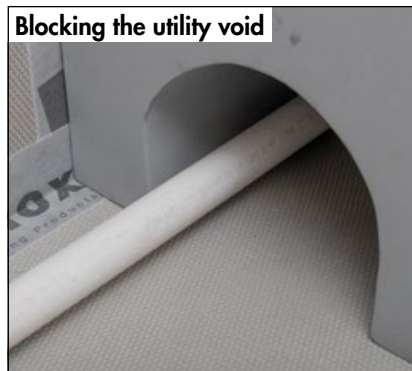

Marmox Benches incorporate a void to allow for the housing of pipework. You may wish to block this off for tiling. **Important:** Prepare your board before fitting the bench.



A Position the bench on its side on top of the end board supplied and mark the aperture. Cut the board using a pad saw or knife following your line.

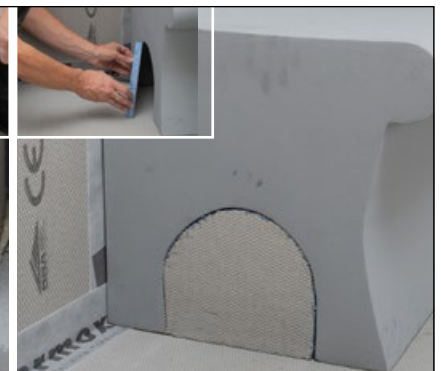

B Place into position and adhere in place using MSP360.