# **DeltaRaising Plinths**



DeltaTrays used with Delta Raising Plinth provide the perfect solution for rooms with concrete floors or rooms that have restricted waste pipe routes. Installing DeltaTray combined with the special pre machined raising plinth, into which the drain body and the waste pipe can be routed, will overcome many installation restrictions. The final result is a raised showering area with stunning appeal.

DeltaTrays used in conjunction with Delta Raising Plinths are used to create stylish raised tileable shower areas in rooms where the drain assembly cannot be situated under the floor. It may be that you do not wish to excavate a concrete floor, there may be floor joists that conflict with the drain location or you simply want to create a stylish raised shower platform.




#### The advantages of a Raised Platform Wetroom:

- ✓ Labour saving shower solution ideal for concrete floors.
- Easily cut down to size.
- Excellent surface to tile.
- ✓ Lightweight & Waterproof.
- Compatible for use with underfloor heating.
- Versatile to suit your design requirements.



#### **Typical Floor Selection**

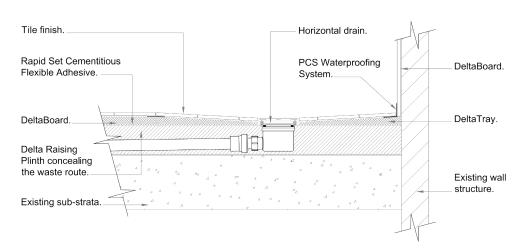

# **DeltaRaising Plinths**



### DeltaTray

| Product ID | Size (W x Hmm) | Thickness   | Drain Position |
|------------|----------------|-------------|----------------|
| G0011      | 800 x 800mm    | 85mm Plinth | Centre Drain   |
| G0021      | 900 x 900mm    | 85mm Plinth | Centre Drain   |
| G0031      | 1000 x 1000mm  | 85mm Plinth | Centre Drain   |
| G0041      | 1200 x 1200mm  | 85mm Plinth | Centre Drain   |
| G0051      | 1500 x 1500mm  | 85mm Plinth | Centre Drain   |
| G0103      | 900 x 1500mm   | 85mm Plinth | Centre Drain   |
| G0116      | 900 x 1800mm   | 85mm Plinth | Centre Drain   |
| G0061      | 1000 x 1000mm  | 85mm Plinth | Offset Drain   |
| G0071      | 800 x 1200mm   | 85mm Plinth | Offset Drain   |
| G0079      | 900 x 1200mm   | 85mm Plinth | Offset Drain   |
| G0081      | 1200 x 1000mm  | 85mm Plinth | Offset Drain   |
| G0091      | 1200 x 1200mm  | 85mm Plinth | Offset Drain   |
| G0101      | 800 x 1500mm   | 85mm Plinth | Offset Drain   |
| G0106      | 900 x 1600mm   | 85mm Plinth | Offset Drain   |
| G0111      | 800 x 1800mm   | 85mm Plinth | Offset Drain   |
| G0201      | 900 x 1800mm   | 85mm Plinth | Offset Drain   |

## DeltaTray Thames Centre & Offset Plinths

| Product ID | Size (W x Hmm) | Thickness    | Drain Position |
|------------|----------------|--------------|----------------|
| E0011      | 800 x 800mm    | 100mm Plinth | Centre Drain   |
| E0021      | 900 x 900mm    | 100mm Plinth | Centre Drain   |
| E0031      | 1000 x 1000mm  | 100mm Plinth | Centre Drain   |
| E0041      | 1200 x 1200mm  | 100mm Plinth | Centre Drain   |
| E0051      | 1500 x 1500mm  | 100mm Plinth | Centre Drain   |
| E0103      | 900 x 1500mm   | 100mm Plinth | Centre Drain   |
| E0116      | 900 x 1800mm   | 100mm Plinth | Centre Drain   |
| E0061      | 1000 x 1000mm  | 100mm Plinth | Offset Drain   |
| E0071      | 800 x 1200mm   | 100mm Plinth | Offset Drain   |
| E0079      | 900 x 1200mm   | 100mm Plinth | Offset Drain   |
| E0081      | 1200 x 1000mm  | 100mm Plinth | Offset Drain   |
| E0091      | 1200 x 1200mm  | 100mm Plinth | Offset Drain   |
| E0101      | 800 x 1500mm   | 100mm Plinth | Offset Drain   |
| E0106      | 900 x 1600mm   | 100mm Plinth | Offset Drain   |
| E0121      | 900 x 1800mm   | 100mm Plinth | Offset Drain   |

## **DeltaTray** [][ Linear Plinths

| Product ID | Size (W x Hmm) | Thickness    | Drain Position             |
|------------|----------------|--------------|----------------------------|
| E0511      | 900 x 1200mm   | 100mm Plinth | Linear Offset Drain (END)  |
| E0516      | 900 x 1500mm   | 100mm Plinth | Linear Offset Drain (END)  |
| E0521      | 900 x 1500mm   | 100mm Plinth | Linear Offset Drain (SIDE) |
| E0531      | 1000 x 1800mm  | 100mm Plinth | Linear Offset Drain (END)  |

- Raising plinths are manufactured to order & require 10 days lead time.